



**File Name:** bosch shu6806uc manual.pdf

**Size:** 2152 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 28 May 2019, 19:34 PM

**Rating:** 4.6/5 from 749 votes.

**Status:** AVAILABLE

Last checked: 2 Minutes ago!

**In order to read or download bosch shu6806uc manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bosch shu6806uc manual . To get started finding bosch shu6806uc manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# bosch shu6806uc manual

By using our site, you agree to our use of cookies. Visit our Privacy Policy to learn more. Complete documentation is available for your Bosch appliance. If you already know your Model Number, just enter the first few characters. The photo should be clear and welllit. Please double check your model number and make sure that all letters are capitalized. Please try again or type the Model Number ENr into the field manually. Please contact us if you can't find what you're looking for. We would like to invite you to take part in a short one minute survey. Thank you. If you wish to be contacted by us, please use our regular contact form here, contact Customer Support at 800 9442904, or chat online with a Customer Support representative. Learn about our response to Covid19 Click on your symptom to see what causes it and how to fix it. With step by step instructions, repair info, and howto videos, you'll see just how easy it is to fix your broken SHU6806UC Bosch Dishwasher. Once there, you will be givenThe site maintains the referenceUse of this Web site constitutes acceptance of the Terms of Service and Privacy Policy. If your dishwasher model was released annually to the same hype as most mobile phones are every year, the release date would be ingrained in your memory even if youre not a fan of that particular model and never planned to get one. It is also handy to know the year for insurance purposes. This information will come in handy if you need to buy any spare parts or, again, if your dishwasher develops a fault and needs to be serviced. Inside the door or on the side panel of your dishwasher, you will find strings of numbers and letters hopefully still legible after years of use. One of these numbers is beginning with the letters FD. This is the serial number youre looking for. Ignore all these number but the first four. The last two digits represent the month. The production month is February.<http://duonglaohanoi.com/userfiles/compaq-presario-sr1519x-manual.xml>

- **bosch shu6806uc manual, bosch dishwasher shu6806uc manual, bosch shu6806uc manual, bosch shu6806uc manual, bosch shu6806uc manual pdf, bosch shu6806uc manuals, bosch shu6806uc manual download, bosch shu6806uc manual instructions, bosch shu6806uc manual.**

In that case, ignore the first digit, giving you the year 02 2002 and the month 05 May. She writes about education, parenting and linguistic technology. Find her at [www.tanyamoziasslavin.com](http://www.tanyamoziasslavin.com).  
NOTE HINT Water valve and drain motor can be measured from front of dishwasher without accessing control module wire harnesses. HINT Water valve and drain motor can be measured from front of dishwasher without accessing control module wire harnesses. Indicating lights will flash. Allow dishwasher to drain. Skip this test. Cant skip this test Dont run entire test to save time when water starts circulating, measure current in main power line to dishwasher. Skip test once current has been measured. A spring loaded plunger closes microswitch when water is flowing. Do all resistance checks with power turned off. Identify each wire color and location at the control module before looking at this chart. Even though parts may look the same, there are often variances in similar parts and it is important to buy parts that fit your specific model.Please try again.Select the series that matches your model number.Try checking the product description for more information.Please try again.Please try again.In order to navigate out of this carousel please use your heading shortcut key to navigate to the next or previous heading. In order to navigate out of this carousel please use your heading shortcut key to navigate to the next or previous heading. R465D126 Relay; EMech; Gen Purp; SPDT; CurRtg 12A; CtrlV 6DC; VolRtg 120AC; PCB Mnt; SolderRegister a free business account Please try your search again later.Product width 3.75 in. Product height 2.5 in. Product weight

0.<http://www.flatfeecanada.com/userfiles/compaq-presario-sr1603wm-manual.xml>

8125 lbs Package length 17 Package width 7 Package height 11 Compatible Models Bosch 24F530T Bosch 24V510T Bosch SHI6802 Bosch SHI6805 Bosch SHI6806 Bosch SHU5312 Bosch SHU5314 Bosch SHU5315 Bosch SHU5316 Bosch SHU6806UC Bosch Dishwasher Various Bosch SHI6802UC 06 Bosch SHI6802UC 11 Bosch SHI6802UC 12 Bosch SHI6805UC 06 Bosch SHI6805UC 11 Bosch SHI6805UC 12 Bosch SHI6806UC 06 Bosch SHI6806UC 11 Bosch SHI6806UC 12 Bosch SHU5302UC 06 Bosch SHU5302UC 11 Bosch SHU5302UC 12 Bosch SHU5304UC 06 Bosch SHU5304UC 11 Bosch SHU5304UC 12 Bosch SHU5305UC 06 Bosch SHU5305UC 11 Bosch SHU5305UC 12 Bosch SHU5306UC 06 Bosch SHU5306UC 11 Bosch SHU5306UC 12 Bosch SHU5307UC 12 Bosch SHU5312UC 06 Bosch SHU5312UC 11 Bosch SHU5312UC 12 Bosch SHU5314UC 06 Bosch SHU5314UC 11 Bosch SHU5314UC 12 Bosch SHU5315UC 06 Bosch SHU5315UC 11 Bosch SHU5315UC 12 Bosch SHU5316UC 06 Bosch SHU5316UC 11 Bosch SHU5316UC 12 Bosch SHU5317UC 12 Bosch SHU6802UC 06 Bosch SHU6802UC 11 Bosch SHU6802UC 12 Bosch SHU6805UC 06 Bosch SHU6805UC 11 Bosch SHU6805UC 12 Bosch SHU6805UC 14 Bosch SHU6806UC 06 Bosch SHU6806UC 11 Bosch SHU6806UC 12 Compatible Part Numbers BOSCH 263832 BOSCH 264093 BOSCH 266746 Bosch 266746RAmazon calculates a product's star ratings based on a machine learned model instead of a raw data average. The model takes into account factors including the age of a rating, whether the ratings are from verified purchasers, and factors that establish reviewer trustworthiness. Please try again later. Peggy Champion 5.0 out of 5 stars. If you want NextDay, we can save the other items for later. Order by, and we can deliver your NextDay items by. You won't get NextDay delivery on this order because your cart contains items that aren't "NextDay eligible". In your cart, save the other items for later in order to get NextDay delivery. Oops! There was a problem with saving your items for later. You can go to cart and save for later there.

All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by UpStart Components. About This Item We aim to show you accurate product information. Manufacturers, See our disclaimer 165314 Dishwasher Lower Dishrack Wheel Replacement for Bosch SHU6806UC Dishwasher Compatible with 00165314 Lower Rack Roller UpStart Components Brand Please note This is an UpStart Components Brand replacement part, NOT an OEM product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. UpStart Components Replacement 165314 Dishwasher Lower Dishrack Wheel for Bosch SHU6806UC Dishwasher Premium quality materials for longlasting durability. Easy toolfree installation helps extend the life of your machine. An affordable solution to costly appliance repairs. Compatible 00165314 Lower Rack Roller for Part Number 00165314, AP2802428, 165314, 420198, 423232, AH3439123, EA3439123, PS3439123, PS8697067 Specifications Brand UpStart Components Customer Reviews Write a review Be the first to review this item. Ask a question Ask a question If you would like to share feedback with us about pricing, delivery or other customer service issues, please contact customer service directly. So if you find a current lower price from an online retailer on an identical, instock product, tell us and well match it. See more details at Online Price Match. All Rights Reserved. To ensure we are able to help you as best we can, please include your reference number Feedback Thank you for signing up. You will receive an email shortly at Here at Walmart.com, we are committed to protecting your privacy. Your email address will never be sold or distributed to a third party for any reason.

<http://www.drupalitalia.org/node/75898>

For immediate help, please contact Customer Care. Thank you Your feedback helps us make Walmart shopping better for millions of customers. OK Thank you! Your feedback helps us make

Walmart shopping better for millions of customers. Sorry. We're having technical issues, but we'll be back in a flash. Done. Draining 30 seconds Allow dishwasher to drain. For a quick reference for measuring resistances from the front of the dishwasher, please refer to the one page diagram Measuring Resistances from the Front of any SHU or SHI Dishwasher. NOTE To access wire harnesses, open door and remove outer door panel by removing three T20 Torx screws on each side of inner door, starting from bottom the top six screws hold the fascia panel to the door. Bring all three parts before disassembling dishwasher and test each part separately. HINT The NTC and HiLimit o 185 F thermostat are changed as a unit. Must pull out dishwasher and remove or block up tub to replace it. When heater comes on, measure current. HINT Make sure water in sump has cooled to room temperature before measuring resistance. HINT The HiLimit o thermostat 185 F is a bimetal selfresetting thermostat. HINT The NTC and HiLimit o 185 F thermostat are changed as a unit. Must pull out dishwasher and remove or block up tub to replace it. HINT Must pull out dishwasher and remove left side panel to access water level switch. Clean all debris from dishwasher base. Measure resistance between middle wire and left preferred or right wire 1 M. u Sensor may be OK. u Turn off dishwasher and replace sensor. HINT The aqua sensor does not affect washability and should not be replaced unless a leak has occurred around it. HINT Dont check this unless customer has brought up long wash times and has measured them. HINT Can also measure resistance between inner terminal light and either outer terminal sensor or sensor itself. HINT Must pull out dishwasher and remove left side panel to access sensor for measuring or replacing.

<http://askueandco.com/images/canon-pro9500-mark-ii-printer-manual.pdf>

Sensor can be pulled out of sensor assembly at rear of sump. HINT Debris can get in if filter basket wasnt properly screwed in and locked. HINT Due to nature of sensor, resistance readings can be inconsistent. Many parts can be snapped out without using tools. The test can run more than one hour to get temperature up to 150oF, but tests can be cancelled to greatly shorten testing time. The test program allows draining, filling, circulating and heating to be checked more quickly than running a standard wash cycle. If not, check each part to see which one failed. This test saves time since you cant get to these parts without removing the tank and cant run resistance checks from front of dishwasher because flow switch stays open. Problem u Washability problems dishwasher wont clean properly Possible Cause Suggested Action u Inappropriate dishwasher detergent used. If debris has jammed impeller, turn off and pull out dishwasher, remove tank, remove circulation motor and unscrew and clean out impeller. HINT If impeller is damaged, replace entire impeller assembly or it wont seal adequately. Instruct customer to twist and lock filter cylinder securely into sump. CAUTION Use caution when removing debris from sump to avoid being cut by sharp debris such as aluminum can tabs or broken glass. HINT Due to high temperature rinse 161 F breaking down food debris and triple filtering system trapping food debris, filters shouldnt normally clog up. Problem often caused by filter not being securely locked down. Instruct customer to twist and lock filter cylinder securely into dishwasher sump. The system always resets when door closes. Check linkage by moving it manually. HINT Water level in sump should be at or below drain motor cover. If so, turn off dishwasher and replace indicator light. CAUTION Use caution when removing debris from sump to avoid being cut by sharp debris such as aluminum can tabs or broken glass. Possible Cause u Water in dishwasher base from leaky or loose hose.

<https://greenemiller.com/images/canon-pro-9000-service-manual.pdf>

If necessary, remove drain motor to clean impeller. NOTE Cleaning sink air gaps or sinks are not covered under warranty. To start the test cycle, press both the POWER SCRUB PLUS and REGULAR WASH buttons a second time. When the test cycle has completed and a fault was detected, the following indicator LED's will be illuminated. To check the wash program LED, press its corresponding button. To check the Cycle Countdown display, Refill Rinse Agent LED and REGULAR WASH button LED, press the REGULAR WASH button press the DELAY START button to test the

Cycle Countdown display alone. The Cycle Countdown display should show "88" when the DELAY START button is pressed and "8h" when the REGULAR WASH button is pressed. When the test cycle has completed, the Cycle Countdown display will indicate a fault using the codes below. If the water level switch f1 has failed open circuited, the display will show fault code "4" and the unit will continually fill and drain where the test cycle won't be completed. OFF 0 4 PR22MV 3a BPIBPU 2a PR21L 1a PR24VR POS. To better understand these appliances, their operation and construction we suggest that you read this manual thoroughly before attempting any repairs. All information is current at the time of printing. Racks, parts only. This does not include rack wheels; silverware baskets or plastic shelving. Lifetime Stainless Steel. Must receive a special authorization before attempting any repairs or replacement. Cosmetic items, Facia and Door Panels are only warranted against manufacturing defects. In the event of a scratch or dent have the customer contact the Customer Service Department. Disconnect the electrical service before attempting any repairs, and live tests are to be performed by experienced and qualified service personnel only. Located just under the Model Number is the tendigit Serial Number. The Serial Number for this unit is FD 7801 123456.

Service note A second Model and Serial number tag is located on the Base, see Section 5, Fig. 101. H 6 Product Overview The Bosch dishwasher utilizes a two motor system with separate Circulation and Drain Motors, and a Flow Through Heater controlled by a Flow Switch and NTC Thermistor. As water temperature increases the NTC records the decrease in resistance. If the beam passes easily through the prewash water then no additional wash water is added. If the beam cannot pass through, then the prewash water is drained and a fresh fill is added for the main wash cycle. TO OPERATE EITHER MODEL, a SHU 4006 is shown Fig. 32. First select a cycle by pushing the corresponding Cycle Button in. The Cycle Button remains in the indented position until another cycle is chosen. You will hear the Drain Motor activate. The Timer Knob will continue to advance clockwise back to the twelve O'clock position until the cycle is complete. Actual values may vary. The actual cycle duration, water and energy usage are dependent upon inlet water temperature. To change the cycle, simply press the desired Cycle Button twice. The LED above that cycle will then illuminate. When the cycle is complete the Clean LED will be illuminated. TO CANCEL A CYCLE Press the Power Scrub Plus and Regular Wash Buttons both in at the same time. The unit will then drain and the Clean LED will illuminate. The cycle will resume from where it left off. The Cycle Countdown will display an approximate run time for the cycle chosen. This run time will depend on incoming water temperature and the turbidity of the prewash water. Note It is normal for the Countdown Display to remain at a time increment for more than one minute, or skip a time increment depending on the calculations of the Control Unit. Also, with continued use the Control Unit will learn the wash and temperature patterns for the most commonly used programs and will then reduce the overall start and running times.

[kaplanpm.com/wp-content/plugins/formcraft/file-upload/server/content/files/1626c6114dfb3c---8n-manual-pdf.pdf](http://kaplanpm.com/wp-content/plugins/formcraft/file-upload/server/content/files/1626c6114dfb3c---8n-manual-pdf.pdf)

At the end of the cycle the display will show a CL, indicating that the cycle is complete. The unit will then drain and the figure CL will appear in the display. DELAY START The Delay Start feature allows the unit to be delayed for up to nine hours. To program, start the unit as described above, but after selecting a cycle push the Delay Start button. The display will show a 1h, or onehour delay. Continue to depress the Delay Start Button until the desired delay time is reached up to nine hours, 9h. The unit will begin automatically once the delay time has elapsed. To reset the delay, press the Delay Start Button until it reaches 0h. REFILL RINSE AGENT LED The Refill Rinse Agent LED is activated via a Reed Switch on the Detergent Dispenser, Section 4, Fig. 83. The LED will illuminate when the Rinse Agent Dispenser is empty. Shown above are the range of values that may be obtained while running the dishwasher under normal conditions. The actual cycle duration, water and energy usage

are dependent upon inlet water temperature and amount of soil on dishware. **TOP RACK ONLY** The Top Rack Only feature can be used in conjunction with any cycle. To activate, press the Top Rack Only Button after selecting a cycle, the Top Rack Only LED will illuminate and all water will be diverted to the upper wash arm for the complete cycle. However, all Racks are constructed from a steel wire grid with a gray nylon outer covering. Note Racks may discolor due to the water supply or types of food remaining on the dishes. We recommend that a vinegar wash be used to assist in removing these stains. Start the unit, and let run approximately ten minutes, then pour in two cups of white vinegar and let the unit complete the cycle, repeat if necessary. Fig. 41 Fig. 42 Fig. 43 On select models the Upper Rack is height adjustable. To adjust rack height, or to remove the Rack from the unit. With the Rack fully extended. Lift up on the Rack until the Front Rollers disengage from the Rail.

Fully extend the Rack as shown in Fig. 42 Now bring the Rack out further and allow the Rear Wheels to disengage. Note how the Rack Rollers are designed to ride on the outside of the Rails for a smoother operation. Rollers Rack Rollers are a press fit making for easy removal and replacement. H 21 Rack System Fig. 44 Fig. 45 Attached to the Upper Rack is the Upper Spray Arm Assembly. The Upper Spray Arm can be removed from the Upper Spray Arm Assembly for cleaning or replacement by turning the Arm Nut counterclockwise, Fig. 44. And then bringing the Arm down and off the Arm Assembly, Fig. 45. H 22 Interior Features 1 2 2 7 3 4 6 5 Fig. 51 Interior features for all model dishwasher covered in this repair manual are identical. Those features include 1. 2. 3. 4. 5. 6. 7. Strike Plate. The Strike Plate is in a fixed position and cannot be adjusted. Upper Rack Rails and Guide Rollers. Door Gasket Lower Spray Arm Filter Basket Filter Screen Feeder Tube Assembly H 23 Interior Features Fig. 52 The Upper Rack Rails are made of stainless steel with a plastic end cap. Fig. 53 To remove the Rail, disengage the End Cap by applying outward pressure to the Cap's top tab, unclipping it from the Rail. Then slide the Rail out from the Guide Rollers. Fig. 54 The Upper Rack Guide Rollers are permanently attached to the Tank and cannot be removed or repaired. Fig. 55 The Door Gasket is press fit into a channel molded around the Tank. Fig. 56 To remove the Gasket, simply pull it away from the Tank Channel. Note Two inches of overlap are left at each end of the Gasket to insure a proper seal. To replace, press the ribbed end firmly into the channel until secure. No sealant or glue is required. Service tip To test for a bad Door Gasket, open the dishwasher door and insert a dollar bill, then close the door and pull the bill out. If the bill is snug the Gasket is good, if the bill slides out easily the Door Gasket may need to be replaced. H 24 Interior Features Water Level Fig. 57 Fig.

58 Fig. 59 Fig. 510 2 1 Fig. 511 Fig. 512 2 H 25 Interior Features Fig. 57 The operating water level of the dishwasher is at approximately the upper edge of the filter basket. Fig. 58 The Lower Spray Arm is press fit into the Feeder Tube Socket. To remove the Arm, grasp the Arm Hub and pull up until the Arm disengages from the Socket. The Arm or Arm Socket can now be checked for debris. Fig. 59 The Filter Basket is removed by turning it ninety degrees counterclockwise. Fig. 510 Then lift it out for cleaning. The Filter is a fine mesh of stainless steel and should be inspected and cleaned at least once a month. Fig. 511 With the Filter Basket removed, the filter screen can then be lifted out. The Filter Screen is also made of stainless steel, and was designed with rolled ends to eliminate sharp edges. It too should be inspected and cleaned at least once a month. Fig. 512 With the Filter Screens removed you now have access to the sump area. The Sump has a Drain Intake on the left, and the Circulation Pump Intake on the right. A removable cover, item 1, hides the Drain Impeller. To remove the cover, remove the single T20 Torx screw and then lift the cover off. You may now examine the Impeller for any obstructions. The Feeder Tube Assembly allows water to flow to the Lower, then Upper Spray Arms and then to the Top Sprayer Head. It is replaced as a complete assembly by first removing the two T20 Torx screws, item 2, at its base. Then bring the tube up and off the Sump Housing, and remove it from the retaining clip located on the rear wall. Rinse Agent Dispenser. Detergent Cup. Steam Vent. Note Mechanical operation and removal of the Dispenser is

shown in Section 4. Fig. 61 To fill or adjust the Rinse Agent Dispenser, open the Rinse Agent Door by pulling up on the Door Latch. 1 The Dosage Meter, item 1, is now visible. The Dosage Meter allows you to adjust the amount of Rinse Agent dispensed into the rinse stage of the cycle. The factory setting is three.

2 1 2 There is also an eyepiece, item 2, that provides a visual indication as to the amount of Rinse Agent remaining in the Dispenser. Fig. 62 To the right of the Rinse Agent Dispenser is the Detergent Cup, item 1. 2 Once detergent has been loaded into the cup, slide the Detergent Door, item 2, closed. 1 When the door is fully closed press down on the door end to lock it. Fig. 63 2 1 Fig. 64 A white Locking Lever, item 1, will then extend. Once closed, the detergent door may be released by pressing in on the Locking Lever. With the Detergent Door closed the Steam Vent is now visible, item 2. During the drying stage of the cycle, steam is drawn through the vent and collects in a Condensation Tube. It is important when attempting to determine the cause of a Washability complaint that all four factors be considered and tested. Time The duration of the program is accurate see cycle chart. Temperature The wash and rinse temperatures are within the desired range see cycle chart. Water The unit is filling with the correct amount of water Section 3, Fig.57 Detergent The detergent is fresh, and not being used in excessive amounts. Please note Other factors such as clean filters, a properly routed drain hose, water hardness and quality, as well as loading of items will also effect Washability. DRYING As part of an energy saving design Bosch Dishwashers do not activate the Heating Element during the Drying cycle. During the drying portion of the cycle all dishwasher items will then radiate the stored heat, thus evaporating any water that has collected on the items surface, burning it off and converting the liquid into steam. This process of "flash drying" is assisted by the release of Rinse Agent into the rinse water. Rinse Agent is a water softener that inhibits water from collecting or pooling, allowing it to be easily evaporated. The remaining steam is vented from the interior through the Steam Vent Fig.

64, item 2 where it is then collected by, and drained from the Condensation Tube Section 4, Fig. 75, item 2. Service note When confronted with a drying complaint, make sure the Rinse Agent Dispenser is full, and the rinse water temperature is within the desired range. Please remember that the unit will not dry without Rinse Agent. H 28 Service Reminder From this point in the manual only the technical features and components of the SHU 5312 will be demonstrated. However, due to the overwhelming similarities between the model SHU 5312 and the remaining Bosch Dishwasher line, you will be able to easily diagnose and repair all current Bosch model SHU, SHI and SHV Dishwashers. Please note Door Guards must be in place before reinstalling the Door Panel. Please note The Combination Lever cannot be replaced individually, but only as part of a new Dispenser Assembly. The Combination Lever allows the Soap Door to open, and later in the cycle dispenses the Rinse Agent. To remove the Actuator, first disconnect the Wiring Connector. This completes the circuit, and activates the Refill Rinse Agent LED located on the Facia Panel. To remove the Reed Switch, first disconnect the Wiring Connector. Now, using a small screwdriver push in on the Reed Switch Mounting Tab, Fig. 83. As you push in on the mounting tab, use a needlenose pliers to bring the switch down and out from the Dispenser, Fig. 84. H 33 Dispenser Removal Fig. 85 Fig. 86 If required, the Dispenser Assembly can be replaced as a complete unit. TO REMOVE First remove the Upper Rack Section 3, Fig. 43. Wiring Connectors for the PTC Actuator, Reed Switch and Condensation Tube. The Condensation Tube is inserted into the right side of the Dispenser with a gasket seal, and press fit along the right side of the Inner Stainless Steel Door. To remove, first remove any securing tape or wire ties for both the Condensation Tube and Upper Wiring Harness.

Then, disengage the tube from the door by pulling it toward you, and sliding the tube out from the Dispenser. Now, using a broad tipped regular screwdriver spread the top and bottom metal positioning strips away from the Dispenser, Fig. 85. Then apply light pressure to the Dispenser, and break the seal between it and the Inner Stainless Steel Door, Fig. 86. TO INSTALL Clean the inner

portion of the stainless steel door where the Dispenser Gasket will seat. Then bend the positioning strips back into place, straightening them if necessary. Now, insert the new Dispenser making sure the positioning strips fit snugly against the Dispenser Body. The Dispenser Gasket will make a watertight seal so caulk or sealant is not required. Replace the Condensation Tube, Wiring Connectors and Upper Rack. H 34 Fascia Assembly **IMPORTANT SERVICE NOTE** The Fascia Assembly cannot be removed unless the Outer Door is removed first. See section 4, Fig. 71. **FASCIA ASSEMBLY REMOVAL** After removing the Outer Door, remove the six T20 Torx screws securing the Fascia Assembly to the Inner Stainless door, Fig. 91. Fig. 91 Fig. 92 Fig. 93 With the screws removed, bring the Fascia Assembly down cradling it so as not to scratch the Fascia Console. Now remove the Wiring Connectors by pressing in on the locking tabs of each connector, then sliding the connector up and off from the Control Module. H 35 Fascia Assembly With the Fascia Assembly removed from the unit, it can be further separated into two assemblies. Item 2, Door Latch Assembly. Item 3, Control Module. Also, for better visibility it is strongly recommended that the Outer Door be removed as well. The Front Accessible Lower Components consist of the following items. 1. 2. 3. 4. 5. 6. 7. 8. 9. Electrical Connection. Circulation Motor Capacitor. Front Leveling Legs. Model and Serial number tag. Rear Leveling Leg adjustment screw. Water Solenoid Valve. Access Panel. Drain Motor. Circulation Motor.

The Circulation Motor cannot be replaced from the front, but is accessible for voltage or wiring testing. 10. Door Spring Adjustment Screws. The adjustment can only be made when an accessory door panel is added to the unit. Turning the screw clockwise will balance the additional weight of the added panel. 1 Fig. 102 The electrical connection, item 1, is a three wire hookup that is secured with wirenuts. The Capacitor can be replaced as a separate component without removing the Circulation Motor. The Rear Leg Adjustment Screw, item 1, allows the single Rear Leveling Leg to be adjusted from the front of the unit. Turning the screw clockwise will extend the leg, and counterclockwise retracts it. For convenience an additional Serial Number Tag, item 2, is located on the Base. Fig. 105 Fig. 106 To replace the Water Solenoid Valve, first remove the two T20 Torx valve mounting screws. Then bring the Water Valve out from the Base, and disconnect the water line by loosening the Water Line Clamp arrow and removing the wiring leads. Item 2, Drain Motor Locking Tab. Item 3, the Sump Fill Hose and its two connection points A and B. Fig. 1011 Fig. 1012 Fig. 1013 Next, remove the wiring connectors and then while pulling back on the Locking Tab, turn the Drain Motor clockwise. Continue turning the Drain Motor clockwise until it reaches the two o'clock stop position. Then bring the motor out from the Sump. The Drain Motor is mounted to the Sump using a slot and tab fit. To install the Drain Motor, insert it back into the Sump at the two o'clock position making sure that all three slots and tabs line up, then turn counterclockwise until secure and the Locking Tab locks. H 42 Service Reminder From this point forward, all service procedures demonstrated in the remainder of this repair manual, will require the dishwasher to be disconnected and removed from the cabinet for servicing.

<http://www.drupalitalia.org/node/75899>